



CAUTION! READ FIRST

BionX[®]

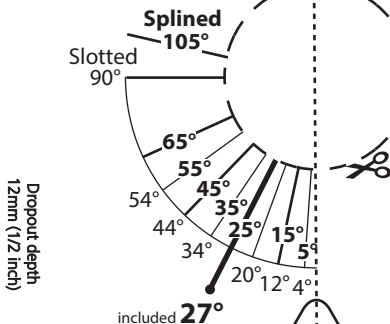


Dropout depth
12mm (1/2 inch)

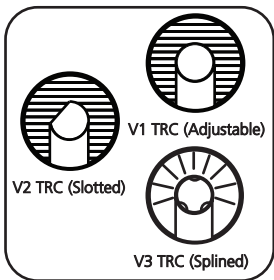


Verify Torque Reaction Collar (TRC) Type




The axle notch must be pointing in the direction of 6 o'clock with the bicycle on the ground for the assist mode to function properly. Use the template above and align the dotted line with the axle notch. The angle closest to the center of the dropout indicates the part required.

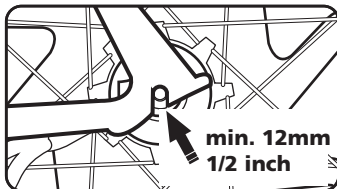


Minimum left hand frame dropout depth is 12mm (1/2 in.) on the short side

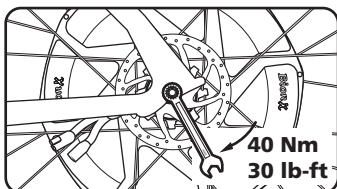

Required axle nut torque is 40Nm (30lb-ft)

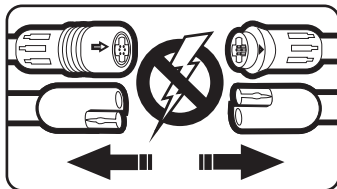

The system must be off before plugging/unplugging ANY connection (including the console and battery)

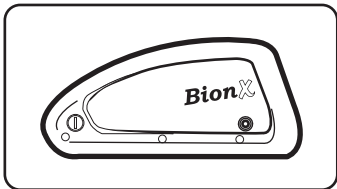

Batteries MUST be charged at least every 6 months (classic 37V or less batteries min. every 3 months)

The system must be installed by an authorized dealer to validate the warranty. Please give this information card to your customer to accompany the User Manual.

For instructions on the adjustable TRC see - Pour les instructions en français voir - Für Anleitungen in Deutsch besuchen Sie bitte: - www.rideblonx.com/downloads